



1740 SHDSL 2/4-Wire Router Quick Installation Instructions


Document Number 1740-A2-GZ10-00

May 2005

Installation

- 1 Connect the supplied external AC adapter into the DC power outlet on the back of the router. Connect the power supply into your wall outlet or surge protector. Turn on the power switch. After a self-test runs, the POWER indicator on the front of the router will illuminate green to indicate that power is being supplied to the router.
- 2 Connect the supplied RJ45 cable to the port marked LINE at the back of the SHDSL router. Connect the other end of the cable to your SHDSL wall outlet. A green LED on the front of the device labeled LINK will illuminate steadily.
- 3 Insert one end of the RJ45 Ethernet cable into one of the LAN ports marked LAN on the back of the SHDSL router. Connect the other end of the cable into the Ethernet Network Interface Card (NIC) installed in your computer. Connect up to four Ethernet devices to the router.
- 4 The router's default IP address is 192.168.1.1. To configure the router, set up your PC to be on the same network segment and open 192.168.1.1 with your web browser.

See the user's guide on the CD for more information.

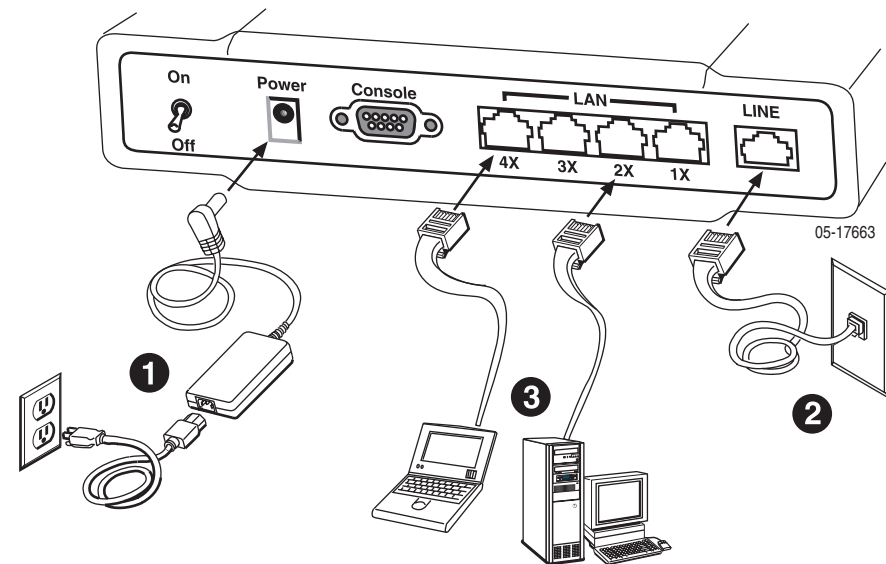

1740-A2-GZ10-00