



1754 SHDSL Router

Quick Installation Instructions

Document Number 1754-A2-GZ10-00


June 2005

Installation

- 1 Connect one of the supplied RJ11 cables to the port marked DSL 1-2 at the back of the SHDSL router. Connect the other end of the cable to a SHDSL source. Connect the other supplied RJ11 cable to the port marked DSL 3-4. Connect the other end of the cable to a SHDSL source.
- 2 Insert one end of the RJ45 Ethernet cable into one of the LAN ports marked LAN on the back of the SHDSL router. Connect the other end of the cable into the Ethernet Network Interface Card (NIC) in your PC. Connect up to four Ethernet devices to the router. Use a crossover cable for a hub.
- 3 Connect an earth ground to the grounding terminal (marked FG).
- 4 Connect the supplied external AC adapter into the DC power outlet on the back of the router. Connect the power supply into your wall outlet or surge protector.

The router's default IP address is 192.168.1.1. To configure the router, set up your PC to be on the same network segment and open 192.168.1.1 with your web browser. The default user name is **admin** and the default password is **admin**.

See the user's guide on the CD for more information.

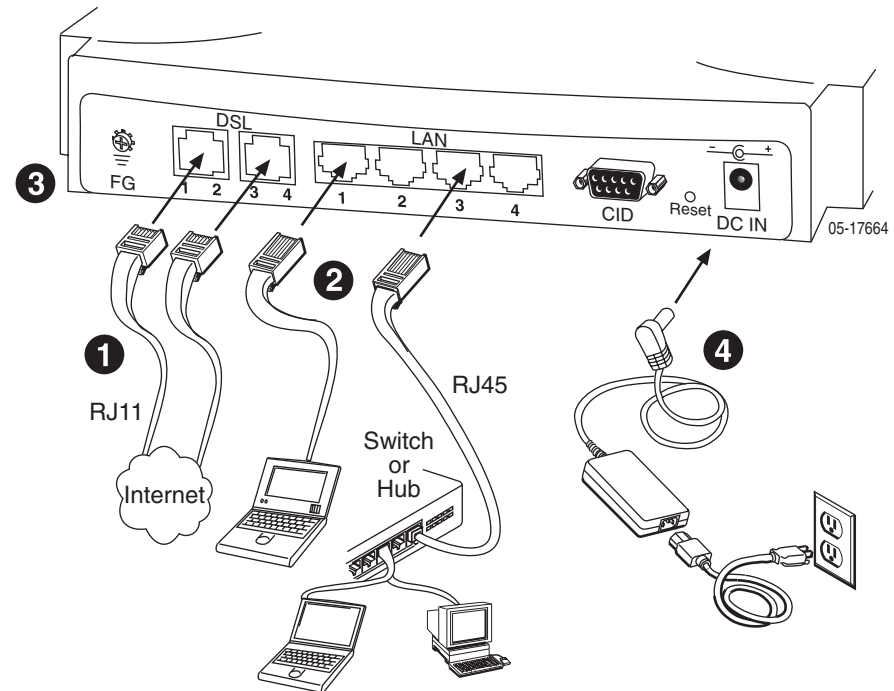

1754-A2-GZ10-00