



1862 VoIP IAD


Quick Installation Instructions

Document Number 1862-A2-GZ10-10

September 2005

Installation

- 1 If you will use the USB port, install the USB driver:
 - Insert the CD in your CD-ROM drive
 - Browse to the **USB Driver** directory
 - Start **setup.exe**
 - Follow the instructions on your screen
- 2 Connect the power adapter to the Power jack of the IAD, then plug the power adapter into an AC wall outlet.
- 3 Connect the FXS port of the IAD to your analog telephone with an RJ11 connector cable.
- 4 Optionally, connect the USB port of the IAD to a free USB port on your PC with a standard USB cable.
- 5 Alternatively, connect the LAN port of the IAD to your PC's Ethernet port, or to an Ethernet switch or hub, with an RJ45 cable.
- 6 Connect the ADSL port to the wall outlet, a POTS splitter, or micro filter (consult your service provider), with an RJ11 connector cable.
- 7 Turn on the power switch on the rear panel.

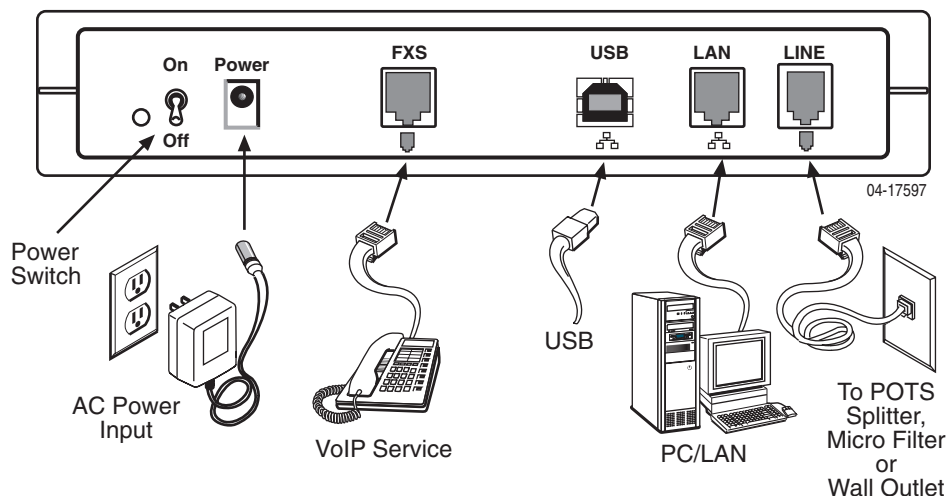

Using the Web Interface

Configuration of the Gateway is performed using its built-in web interface. To use the web interface, start your Internet browser. Type the default IP address for the Gateway into the address field: **http://192.168.1.1** Your PC must be on the same subnet as the Gateway. The web interface requires a user name and password. The default username is **root**. The default password is **b3gvoip** for MGCP units (Model Number 1862-A1-40x) and **1234** for SIP units (Model Number 1862-A1-42x). See the user's guide on the CD for details.



1862-A2-GZ10-10