



Z H O N E™

# Hotwire® TDM SHDSL Endpoints

## Models 7995-A2-411, 7995-A2-421, 7995-A2-422, 7995-A2-700, 7996-A2-410, 7996-A2-420, and 7996-A2-700

### Installation Instructions

Document Number 7990-A2-ZN10-30

December 2005

## Contents

End User License Agreement (Zhone and Affiliates) .....	2
Product Documentation Online .....	3
Package Checklist .....	4
Installation Overview .....	4
Connecting Power to the Unit .....	5
Connecting to the Network .....	6
Connecting to a DTE .....	6
LEDs .....	7
Connecting to a System Terminal .....	8
Asynchronous Terminal Interface Menu .....	9
Entering Identity Information .....	10
Selecting a Configuration Method .....	10
Configuring the Unit Using the Configuration Menus .....	10
Displaying Configuration Options .....	11
Configuration Edit/Display .....	11
Configuring the Unit Using the Internal Switches .....	25
Important Safety Instructions .....	29
CE Marking .....	29
Contacting Global Service and Support .....	30
Technical Support .....	30
Service Requirements .....	30
Trademarks .....	30

# End User License Agreement (Zhone and Affiliates)

**Do not install this Software unless you agree to these provisions.  
Return the Software promptly for a refund if you do not agree.**

License. Zhone Technologies, Inc. and/or an affiliate ("Zhone") hereby grants you ("User")—either an individual or a single business entity—the non-exclusive right to install, access, run, or inter. act with ("Use") one copy of the enclosed software (which may have been, or may be, provided on media, as part of a hardware platform, through download, or otherwise) and associated documentation ("Software") on the first computer system on which User installs the Software ("System") solely for internal business purposes (including, without limitation, providing products and services to User's customers) and subject to the restrictions below). Zhone may, in its sole discretion, make available future updates or upgrades to the Software each of which is also Software subject hereto. Title to and all patent rights, copyrights and other intellectual property rights in the Software are retained by Zhone and its direct and indirect suppliers and licensors ("Licensors").

Restrictions. The Software may not be (a) Used on or from any system other than the System; (b) Used with more than any maximum number of subscribers stated in the documentation accompanying the Software; (c) Used so as to circumvent any technological measure included therein or provided by Zhone from time to time to control access to or limit use of the Software; (d) sublicensed, rented, leased or lent to third parties; (e) imported or exported into any jurisdiction except in compliance with all applicable laws of the United States and such jurisdiction; (f) transferred to a third party unless (A) User transfers the original and all surviving copies to a third party who has agreed in writing to be bound hereby and (B) such third party pays to Zhone such reasonable additional fee as Zhone may impose from time to time with respect to such transfer; or (g) made available to third parties as part of any time-sharing or service bureau arrangement. User shall not have the right to use the Software or any portion thereof for a use other than that contemplated by its documentation. User will not copy all or any part of the Software or attempt, or encourage or permit any third party, to modify, adapt, make derivative works from, reverse engineer, reverse compile, disassemble or decompile the Software or any portion thereof except and only to the extent that such activity is expressly permitted by law notwithstanding this limitation. Violation of any of the foregoing shall be deemed a material breach hereof. User may make a reasonable number of copies solely for archival or disaster recovery and subject to the restrictions imposed by copyright law, but may not modify or otherwise copy the Software. User agrees to reproduce product identification, copyright and other proprietary notices of Zhone and Licensors on all copies. User's rights are only as expressly stated herein. Zhone may immediately terminate your rights if you violate the provisions hereof.

Limited Warranty. Zhone warrants that the media containing the Software is free from defects in material and workmanship for ninety (90) days following your purchase of the Software. You may provide written notice of such defect (addressed to Zhone Technologies, Inc., Attention: Customer Service, 7001 Oakport Street @ Zhone Way, Oakland, CA 94621) no later than ten (10) days following expiration of such period and, as your sole and exclusive remedy, Zhone will provide replacement media. NEITHER ZHONE NOR ITS LICENSORS MAKE ANY OTHER WARRANTY, EXPRESS, IMPLIED OR STATUTORY. ZHONE AND ITS LICENSORS

DISCLAIM ALL WARRANTIES OF FITNESS FOR PARTICULAR PURPOSE, MERCHANTABILITY AND NON-INFRINGEMENT. Some states or other jurisdictions do not allow the exclusion of implied warranties on limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from one state or jurisdiction to another.

Limit of Liability. In case of any claim hereunder or related to the Software, neither Zhone nor its Licensors shall be liable for direct damages exceeding the price paid by User for the Software or for special, incidental, consequential or indirect damages, even if advised in advance of the potential thereof.

U.S. Government Users. The Software is a "commercial item" as defined at 48 C.F.R. 2.101, consisting of "commercial computer software" and "commercial computer software documentation" as such terms are used in 48 C.F.R. 12.212. Under 48 C.F.R. 12.212 and 48 C.F.R. 227.7202-1 to 227.7202-4, U.S. Government Users acquire the Software only with the rights set forth therein.

Third Party Licensors. This Zhone End User License Agreement may be accompanied by differing or additional provisions applicable to portions of the Software provided by one or more Licensors ("Licensor Provisions"). User acknowledges and agrees that its Use of such portions of the Software is subject to the Licensor Provisions.

## Product Documentation Online

Complete documentation for this product is available at [www.zhone.com](http://www.zhone.com).

Select the following document:

*Hotwire TDM SHDSL Endpoints, Models 7995-A2-411, 7995-A2-421, 7995-A2-422, 7995-A2-700, 7996-A2-410, 7996-A2-420 and 7996-A2-700, User's Guide*

# Package Checklist

Verify that your package contains:

- Hotwire® TDM SHDSL Endpoint
- 24 VDC power transformer with separate power cable  
– or –  
6-conductor direct connection DC power cable
- 8-position modular-to-8-position modular network cable
- DB9-to-8-position modular terminal cable

For Model 7995, your package should also contain a:

- V.35 cable adapter

Notify your sales representative if anything is missing or damaged.

## Installation Overview

Installation and configuration of the Hotwire 799x endpoint consists of:

- Connecting power to the unit.
- Connecting to the network.
- Connecting to a DTE.
- Connecting a system terminal.
- Providing initial unit identity information or changing existing identity information.
- Configuring your unit using the Configuration Edit menus.

Before you install the unit, read the *Important Safety Instructions* on page 29.

See the *Hotwire TDM SHDSL Endpoints, Models 7995-A2-411, 7995-A2-421, 7995-A2-422, 7995-A2-700, 7996-A2-410, 7996-A2-420 and 7996-A2-700, User's Guide* for additional information about:

- Configuration Options
- Messages and Troubleshooting
- Technical Specifications
- Connectors, Cables, and Pin Assignments

# Connecting Power to the Unit

If your package includes a power transformer:

- 1 Plug the power cable into an AC outlet having a nominal voltage rating between 100–240 VAC.
- 2 Connect the power cable to the transformer.
- 3 Connect the output cable of the transformer to the connector marked POWER on the rear panel.

If your package includes a direct-connection DC power cable:

Connect the unit to an external +24 or –48 VDC SELV (Safety Extra Low Voltage) power source as described in the following section.

## Connecting the Unit to an Optional External +24 or –48 VDC Power Source

Using the DC power cable, the unit is capable of operating on a +24 VDC or –48 VDC SELV power supply.

To use the DC power cable for +24 VDC:

### ► Procedure

- 1 Connect the green wire to a suitable ground.
- 2 Connect the orange wire to the +24 VDC source.
- 3 Connect the white wire to the return.
- 4 Cut the black, red, and blue wires off at the outer insulation.
- 5 Plug the power connector into the unit.


To use the DC power cable for –48 VDC:

### ► Procedure

- 1 Connect the green wire to a suitable ground.
- 2 Connect the orange wire to the –48 VDC source.
- 3 Connect the black wire to the return.
- 4 Cut the red, white, and blue wires off at the outer insulation.
- 5 Plug the power connector into the unit.

## Power Cable Pinouts

Pin Number	Wire Color	Signal
1	Black	-48 VDC Return
2	Red	-48 VDC Return
3	Green	Ground
4	White	+24 VDC Return
5	Orange	+24 VDC/-48 VDC
6	Blue	No Connection

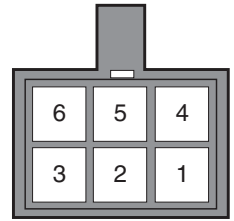

99-16291

## Connecting to the Network

### ► Procedure

To connect your unit to the network:

- 1 Connect one end of the supplied 8-position modular-to-8-position modular network cable into the rear panel DSL jack.
- 2 Connect the other end to your DSL network interface.

### NOTE:


Do *not* use a flat VF network cable as this may severely degrade the performance of the unit. Use only Cat 5 twisted-pair network cable.

## Connecting to a DTE

Model	DTE Connection
7995	The synchronous interface is a 25-pin EIA-530-A interface. Depending on the cable used, the interface can be adapted to an X.21, RS-449, or V.35 interface. A V.35 cable may be used with the supplied adapter.
7996	The G.703 interface is either two BNC connectors (Transmit and Receive) for a 75-ohm unbalanced interface or an 8-position, unkeyed modular connector for a 120-ohm balanced interface.

See *Connectors, Cables, and Pin Assignments* in the User's Guide for specifications of the connectors and cables.

# LEDs

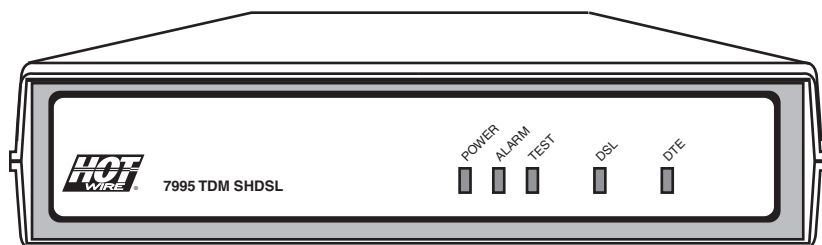

02-17143

The following table contains a description of the LEDs on the Hotwire 799x endpoint's front panel.

Label	Color	LED is . . . *	Indicating . . .
POWER	Green	On Off Slow Cycling	Normal operation. No power to the unit. Unit is in minimum mode and a download is required.
ALARM	Red	On Off	Device failure, or self-test has failed. Self-test passed.
TEST	Yellow	On Off Slow Cycling	Loopback test in progress. No tests in progress. Self-test in progress.
DSL	Green	On Off Slow Cycling	DSL link is up. The DSL link is down. DSL training in progress.
DTE (7995) G.703 (7996)	Green	On Off  Slow Cycling Fast Cycling	DTE port is operational. <b>DTE:</b> No signal on port or configured DTR or RTS are not active. <b>G.703:</b> No signal on port. <b>G.703:</b> Remote Alarm Indication received. <b>G.703:</b> OOF, LOF, EER, or AIS condition received.

\* Slow Cycling: LED turns off and on in equal duration once per second.  
Fast Cycling: LED turns off and on in equal duration 5 times per second.

# Connecting to a System Terminal

An optional system maintenance terminal may be attached to your Hotwire 799x endpoint through the modular jack on the rear panel. The system maintenance terminal allows you to view the status of the unit and change configuration options. The terminal must be a VT100-compatible terminal or a PC running terminal emulation software.

## ► Procedure

To connect your unit to a system terminal:

- 1 Connect the 9-pin end of the supplied terminal cable into a COM port on your PC.
- 2 Plug the other end into the modular jack on the rear panel.
- 3 Set the communication parameters on your PC or terminal to:
  - 9600 baud
  - 8 bit characters
  - no parity
  - 1 stop bit
  - no flow control
- 4 Press Enter from your terminal or PC to activate the Main Menu for the attached unit.  
The system runs diagnostics and status checks. After a few moments, the Main Menu or Logon screen appears on your terminal.

```
main                               Access Level: Administrator                               Model 799x


                                     MAIN MENU

                                     Status
                                     Test
                                     Configuration
                                     Control

-----
Ctrl-a to access these functions                               Exit
                                                             System Operational
```

# Asynchronous Terminal Interface Menu

The following illustration shows the menu paths to the different terminal screens.

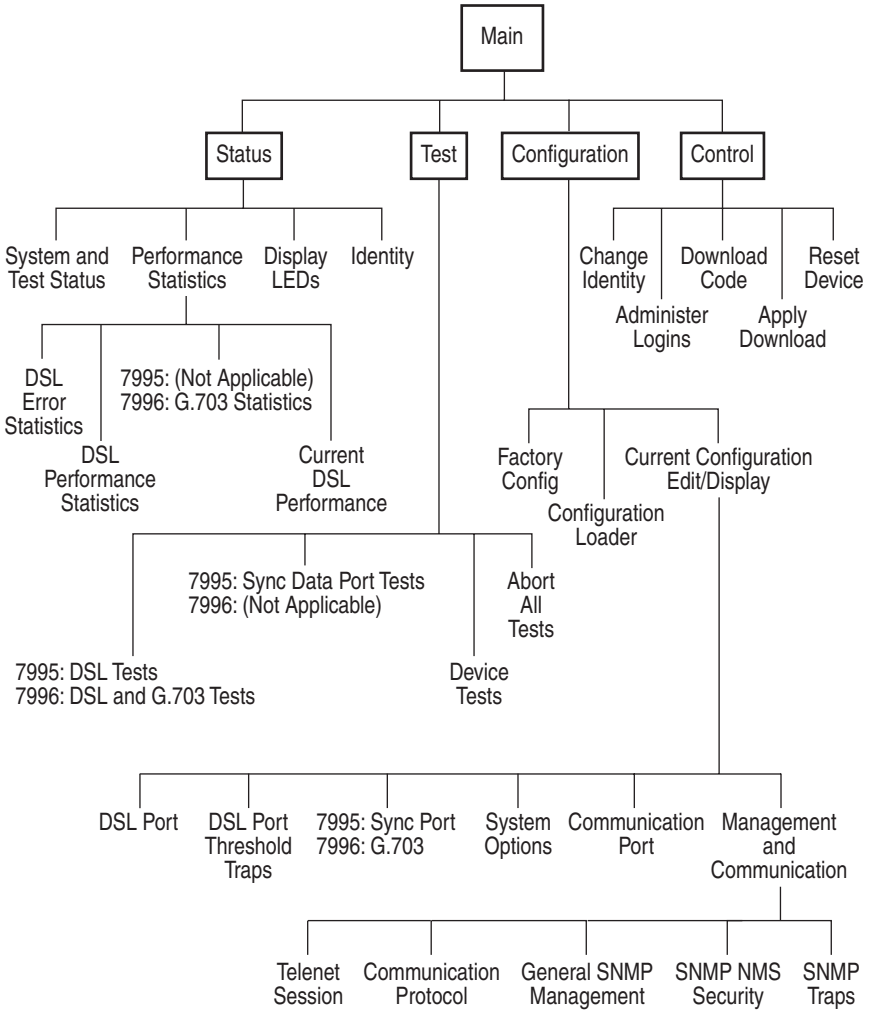

02-17046

# Entering Identity Information

After accessing your unit for the first time, use the Change Identity screen to determine SNMP administrative system information that will be displayed on the Identity screen of the Status branch. To access the Identity screen, follow this menu selection sequence:

*Main Menu → Control → Change Identity*

## Selecting a Configuration Method

You can make configuration changes either through a VT100-compatible terminal and the unit's Configuration menus or by manually changing switches on the board. The unit is shipped with the switchpacks disabled to allow settings to be made through the Configuration menus. See the User's Guide for detailed information about the configuration options and switch settings.

## Configuring the Unit Using the Configuration Menus

Use the Configuration menu to select, display, or change configuration option settings.

**NOTE:**

The Hotwire 799x endpoint is shipped configured as an STU-R. If you use this unit as an STU-R, the configuration options may not need to be altered.

The unit has two sets of configuration option settings:

- **The Current Configuration:** The unit's active set of configuration options.
- **The Default Factory Configuration:** A read-only configuration area containing the factory default configuration options.

# Displaying Configuration Options

To display configuration options, you must first load a configuration into the edit area. To load a configuration option set into the configuration edit area, follow this menu selection sequence:

*Main Menu → Configuration (Load Configuration From)*

Make a selection by placing the cursor at your choice and pressing Enter.

If you select . . .	Then . . .
Current Configuration	The selected configuration option set is loaded and the Configuration Edit/Display menu screen appears.
Configuration Loader	The Configuration Loader screen is displayed allowing you to upload or download configurations from a TFTP server.
Default Factory Configuration	The selected configuration option set is loaded and the Configuration Edit/Display menu screen appears.


## Configuration Edit/Display

The Configuration Edit/Display screen is displayed when the current or default configuration is loaded. To access the Configuration Edit/Display screen, follow this menu selection sequence:

*Main Menu → Configuration → Current Configuration*

– or –

*Main Menu → Configuration → Default Factory Configuration*

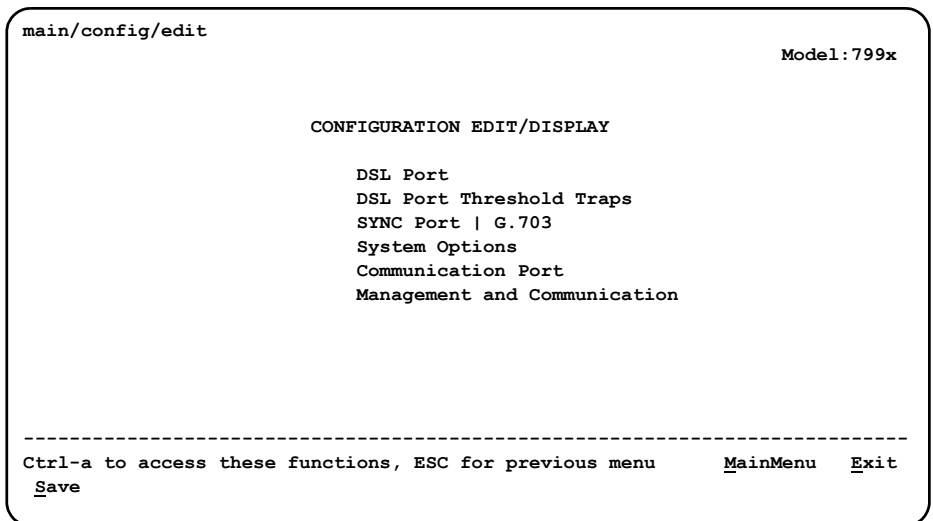

Select . . .	To Access the . . .	To Configure the . . .
DSL Port	DSL Interface Options ( <a href="#">Table 1</a> )	DSL ports on the unit.
DSL Port Threshold Traps	DSL Port Threshold Trap Options ( <a href="#">Table 2</a> )	Threshold for DSL traps (for the STU-C only).
SYNC Port	Synchronous Data Port Options – Model 7995 ( <a href="#">Table 3</a> )	Synchronous DTE interface (Model 7995)
G.703	G.703 Interface Options – Model 7996 ( <a href="#">Table 4</a> )	G.703 interface (Model 7996)
System Options	System Options ( <a href="#">Table 5</a> )	General system options of the unit.
Communication Port	Communication Port Options ( <a href="#">Table 6</a> )	Unit’s COM port options.
Management and Communication	<ul style="list-style-type: none"> <li>• Telnet Session Options (<a href="#">Table 7</a>)</li> <li>• Communication Protocol Options (<a href="#">Table 8</a>)</li> <li>• General SNMP Management Options (<a href="#">Table 9</a>)</li> <li>• SNMP NMS Security Options (<a href="#">Table 10</a>)</li> <li>• SNMP Traps Options (<a href="#">Table 11</a>)</li> </ul>	Management support of the unit through SNMP and Telnet (Telnet is for the STU-C only).

For complete details about the configuration options, see the *Hotwire TDM SHDSL Endpoints, Models 7995-A2-411, 7995-A2-421, 7995-A2-422, 7995-A2-700, 7996-A2-410, 7996-A2-420 and 7996-A2-700, User’s Guide.*

**Table 1: DSL Interface Options (1 of 2)**

Estimated Line Length
Possible Settings: <b>Short, Medium, Long</b> Default Setting: <b>Short</b>
The estimated line length is the estimated distance from the local exchange to determine the speeds that can be supported.

**Table 1: DSL Interface Options (2 of 2)**

<b>Start Up Margin</b>
Possible Settings: <b>0dB – 15dB</b> Default Setting: <b>4dB</b>
Specifies the Signal to Noise Ratio (SNR) margin a port must exceed to successfully train up with the remote unit.
<b>Max DSL Rate</b>
Possible settings depend on whether Spectrum Management is enabled. Determines the maximum speed of the DSL line when in Adaptive Rate mode (Max DSL Rate does not equal Min DSL Rate).
<b>Min DSL Rate</b>
Possible settings depend on whether Spectrum Management is enabled. Determines the minimum speed of the DSL line when in Adaptive Rate mode (Max DSL Rate does not equal Min DSL Rate).
<b>EIA-530 Payload Rate (for Model 7996 only)</b>
Possible Settings: <b>64, 128</b> Default Setting: [Highest multiple of 64 kbps supported by the DSL Line Rate]
When the remote STU-R has an EIA-530-A interface, the Payload Rate set on the STU-C determines the port speed of the synchronous port of the STU-R. Only 64 and 128 kbps are selectable, otherwise this field is read-only.
<b>Remotely Initiated Loopback</b>
Possible Settings: <b>Enable, Disable</b> Default Setting: <b>Enable</b>
Specifies whether the endpoint will respond to a loopback command from the access card.
<b>Peer IP Address</b>
Possible Settings: <b>001.000.000.000 – 223.255.255.255, Clear</b> Default Setting: <b>000.000.000.000</b>
Specifies the peer IP address for the remote management link on the DSL loop.
<b>Circuit Identifier</b>
Possible Settings: <i>ASCII text field</i> , <b>Clear</b> Default Setting: [blank]
Uniquely identifies the circuit number of the transmission vendor’s DSL line for troubleshooting purposes.

**Table 2: DSL Port Threshold Trap Options**

<b>ES Trap Threshold</b>
Possible Settings: <b>1–900, or 0 to Disable</b> Default Setting: <b>120</b>
Specifies the threshold for Error Seconds events in a 15-minute interval after which a trap will be sent.
<b>SES Trap Threshold</b>
Possible Settings: <b>1–900, or 0 to Disable</b> Default Setting: <b>15</b>
Specifies the threshold for Severely Error Seconds events in a 15-minute interval after which a trap will be sent.
<b>UAS Trap Threshold</b>
Possible Settings: <b>1–900, or 0 to Disable</b> Default Setting: <b>0</b>
Specifies the threshold for Unavailable Seconds events in a 15-minute interval after which a trap will be sent.
<b>LOSW Trap Threshold</b>
Possible Settings: <b>1–900, or 0 to Disable</b> Default Setting: <b>0</b>
Specifies the threshold for Loss of Sync Word Seconds events in a 15-minute interval after which a trap will be sent.
<b>CRC Trap Threshold</b>
Possible Settings: <b>1–900, or 0 to Disable</b> Default Setting: <b>0</b>
Specifies the threshold for CRC events in a 15-minute interval after which a trap will be sent.
<b>Attenuation Trap Threshold</b>
Possible Settings: <b>1–127 dB, or 0 to Disable</b> Default Setting: <b>0</b>
Specifies the threshold for loop attenuation in a 15-minute interval after which a trap will be sent.
<b>Margin Trap Threshold</b>
Possible Settings: <b>1–15 dB, or 0 to Disable</b> Default Setting: <b>4</b>
Specifies the threshold for the Signal-to-Noise ratio margin in a 15-minute interval after which a trap will be sent.

**Table 3: Synchronous Data Port Options – Model 7995 (1 of 2)**

<b>Port Type</b>
Possible Settings: <b>E530A, V.35, RS449, X.21</b> Default Setting: <b>E530A</b>
Determines the port type for the data port.
<b>Payload Rate</b>
Possible Settings: <b>64 – 2304 kbps in 64k increments</b> Default Setting: <b>192 kbps</b>
Specifies the payload rate of the port. This option is not displayed on the unit when Adaptive Rate is enabled. The STU-C configures the payload rate for the STU-R when Adaptive Rate is disabled (Max DSL Rate = Min DSL Rate, see <a href="#">Table 1, DSL Interface Options</a> ).
<b>Transmit Clock Source</b>
Possible Settings: <b>Internal, External</b> Default Setting: <b>Internal</b>
Specifies whether the transmitted data for the synchronous data port is clocked using an internal clock provided by the DCE or an external clock provided by the DTE connected to the synchronous data port.
<b>Invert Transmit Clock</b>
Possible Settings: <b>Disable, Enable</b> Default Setting: <b>Disable</b>
When configured as the STU-C and Transmit Clock Source is set to External, specifies whether the clock supplied by the the unit on the TXC interchange circuit DB (ITU-T 114) is phase inverted with respect to the Transmitted Data interchange circuit BA (ITU-T 103). This configuration option is useful when an excessive cable length between the unit and the DTE causes errors.
<b>Send All Ones on Data Port Not Ready</b>
Possible Settings: <b>Both, Disable, DTR, RTS</b> Default Setting: <b>Both</b>
Specifies the conditions on the data port that determine when valid data is not being sent from the DTE. When this condition is detected, all ones are sent to the network.
<b>Action on Network LOS Alarm</b>
Possible Settings: <b>Halt, None</b> Default Setting: <b>Halt</b>
Specifies the action taken on the synchronous data port when an LOS (Loss Of Signal) alarm is received on the DSL interface.

**Table 3: Synchronous Data Port Options – Model 7995 (2 of 2)**

<b>Network Initiated Data Channel Loopback</b>
Possible Settings: <b>Disable, Enable</b> Default Setting: <b>Disable</b>
Allows the initiation and termination of a Data Channel Loopback (DCLB) by the receipt of a DCLB-actuate sequence or DCLB-release sequence from the network or far-end device.
<b>Port (DTE) Initiated Loopbacks</b>
Possible Settings: <b>Disable, DTLB, DCLB, Both</b> Default Setting: <b>Disable</b>
Allows the initiation and termination of a local Data Terminal Loopback (DTLB) or remote Data Channel Loopback (DCLB) by the DTE connected to this port. (DTLB is equivalent to a V.54 loop 3, and DCLB is equivalent to a V.54 loop 2.) Control of these loopbacks is through the DTE interchange circuits as specified by the V.54 standard.
<b>Elastic Store</b>
Possible Settings: <b>Disable, Enable</b> Default Setting: <b>Enable</b>
When configured as the STU-C and Transmit Clock Source is set to External, used to enable or disable a first-in, first-out (FIFO) buffer circuit for the incoming external clock. This circuit is used to compensate for the differences between the frequencies of the data clocks for the two units in the circuit. Do not enable Elastic Store if the attached DCE has an elastic store buffer larger than 32 bits.

**Table 4: G.703 Interface Options – Model 7996 (1 of 2)**

<b>Framing</b>
Possible Settings: <b>Framed, Unframed</b> Default Setting: <b>Framed</b>
Specifies whether G.704 framing is used for the G.703 interface.
<b>Line Coding</b>
Possible Settings: <b>AMI, HDB3</b> Default Setting: <b>HDB3</b>
Specifies the line coding format to be used by the G.703 interface.
<b>Line Framing</b>
Possible Settings: <b>CRC4, noCRC4</b> Default Setting: <b>noCRC4</b>
Specifies the framing format to be used by the G.703 interface.

**Table 4: G.703 Interface Options – Model 7996 (2 of 2)**

<b>Time Slot 16</b>
Possible Settings: <b>Signaling, Data</b> Default Setting: <b>Signaling</b>
Specifies whether the G.703 interface is used for voice or data.
<b>Send (AIS) on Network Failure</b>
Possible Settings: <b>Enable, Disable</b> Default Setting: <b>Enable</b>
Specifies the action taken on the signal transmitted to the G.703 when a valid signal cannot be recovered from the network interface (LOS or OOF).
<b>Primary Clock Source</b>
Possible Settings: <b>G.703, Internal</b> Default Setting: <b>Internal</b>
Specifies from where the unit will derive its timing.

**Table 5: System Options (1 of 2)**

<b>DSL Mode</b>
Possible Settings: <b>STU-C, STU-R</b> Default Setting: <b>STU-R</b>
Controls whether the unit is configured as a SHDSL Transceiver Unit – Central Site (STU-C) or a SHDSL Transceiver Unit – Remote Terminal Site (STU-R).  NOTE: Changing this option will reset the unit.
<b>Test Timeout</b>
Possible Settings: <b>Enable, Disable</b> Default Setting: <b>Enable</b>
Allows tests to end automatically. The feature should be enabled when the unit is remotely managed so that control can be regained after a test is accidentally executed.
<b>Test Duration (min)</b>
Possible Settings: <b>1 – 120</b> Default Setting: <b>10</b>
Number of minutes for a test to be active before automatically ending.

**Table 5: System Options (2 of 2)**

<b>G.703 Line Termination</b>
(Model 7996) Possible Settings: <b>75 ohms, 120 ohms</b> Default Setting: <b>120 ohms</b>
Sets the line impedance for the unit.
<b>Region Setting</b>
Possible Setting: <b>Annex B</b> (read-only)
For an STU-C, specifies the set of unique, regional SHDSL operations parameters to be used by the unit. Annex B is for European networks.
<b>Spectrum Management</b>
Possible Settings: <b>Enable, Disable</b> Default Setting: <b>Disable</b>
For an STU-C, enabling spectrum management limits the DSL speeds on the unit to meet BT Access Network Spectrum standards.
<b>Country Code</b>
Possible Setting: <b>UK</b> (read-only)
For an STU-C, determines the spectrum management standard to be used (ANFP for UK) to calculate the speeds allowed on this unit which comply with spectrum management.

**Table 6: Communication Port Options (1 of 3)**

<b>Port Use</b>
Possible Settings: <b>Terminal, Net Link</b> Default Setting: <b>Terminal</b>
Specifies how the communications port is to be used.
<b>Port Type</b>
Possible Settings: <b>Asynchronous, Synchronous</b> Default Setting: <b>Asynchronous</b>
Determines whether the communication port will be asynchronous or synchronous when Port Use is set to Net Link.

**Table 6: Communication Port Options (2 of 3)**

<b>Data Rate</b>
Possible Settings: <b>9.6, 14.4, 19.2, 28.8, 38.4, 57.6, 115.2</b> Default Setting: <b>9.6</b>
Specifies the communication port baud rate.
<b>Character Length</b>
Possible Settings: <b>7, 8</b> Default Setting: <b>8</b>
Determines the character length of the communication port.
<b>Parity</b>
Possible Settings: <b>None, Odd, Even</b> Default Setting: <b>None</b>
Specifies the parity of the communication port.
<b>Stop Bits</b>
Possible Settings: <b>1, 1.5, 2</b> Default Setting: <b>1</b>
Specifies the number of stop bits for the communication port.
<b>Ignore Control Leads</b>
Possible Settings: <b>Disable, DTR</b> Default Setting: <b>Disable</b>
Specifies whether DTR is used.
<b>Login Required</b>
Possible Settings: <b>Enable, Disable</b> Default Setting: <b>Disable</b>
Specifies whether an ID and password are required to access the asynchronous terminal interface on the communication port when Port Use is set to Terminal. Login IDs are created with a password and access level.
<b>Port Access Level</b>
Possible Settings: <b>Administrator, Operator</b> Default Setting: <b>Administrator</b>
Specifies the highest level of access allowed when accessing an ATI session through a Telnet session when Port Use is set to Terminal.

**Table 6: Communication Port Options (3 of 3)**

<b>Inactivity Timeout</b>
Possible Settings: <b>Enable, Disable</b> Default Setting: <b>Disable</b>
Provides automatic logoff of a Telnet session when Port Use is set to Terminal.
<b>Disconnect Time (Minutes)</b>
Possible Settings: <b>1 – 60</b> Default Setting: <b>5</b>
Number of minutes of inactivity before the session terminates automatically when Port Use is set to Terminal and Inactivity Timeout is enabled. Timeout is based on no keyboard activity.

**Table 7: Telnet Session Options (1 of 2)**

<b>Telnet Session</b>
Possible Settings: <b>Enable, Disable</b> Default Setting: <b>Enable</b>
Specifies if the unit will respond to a Telnet session request from a Telnet client on an interconnected IP network.
<b>Telnet Login Required</b>
Possible Settings: <b>Enable, Disable</b> Default Setting: <b>Disable</b>
Specifies whether a user ID and password are required to access to the ATI through a Telnet session. Login IDs are created with a password and access level.
<b>Session Access Level</b>
Possible Settings: <b>Administrator, Operator</b> Default Setting: <b>Administrator</b>
The Telnet session access level is interrelated with the access level of the Login ID.
<b>Inactivity Timeout</b>
Possible Settings: <b>Enable, Disable</b> Default Setting: <b>Disable</b>
Provides automatic logoff of a Telnet session.

**Table 7: Telnet Session Options (2 of 2)**

<b>Disconnect Time (Minutes)</b>
Possible Settings: <b>1 – 60</b> Default Setting: <b>5</b>
Number of minutes of user inactivity before a Telnet session terminates automatically. Time out is based on no keyboard activity.

**Table 8: Communication Protocol Options**

<b>Node IP Address</b>
Possible Settings: <b>001.000.000.000 – 223.255.255.255, Clear</b> Default Setting: <b>000.000.000.000</b>
For an STU-C, specifies the Node IP address.
<b>Node Subnet Mask</b>
Possible Settings: <b>000.000.000.000 – 255.255.255.255, Clear</b> Default Setting: <b>000.000.000.000</b>
For an STU-C, specifies the Node Subnet Mask.
<b>Default Network Destination</b>
Possible Settings: <b>None, COM, DSL</b> Default Setting: <b>None</b>
Specifies where the default management network is connected when Port Use is set to NetLink for the COM port.. For example, if your default network is connected to the COM port, select COM as the default management network destination.
<b>Communication Port IP Address</b>
Possible Settings: <b>001.000.000.000 – 223.255.255.255, Clear</b> Default Setting: <b>Clear (000.000.000.000)</b>
Specifies the Communication Port IP Address when Port Use is set to NetLink for the COM port.
<b>Communication Port Subnet Mask</b>
Possible Settings: <b>001.000.000.000 – 255.255.255.255, Clear</b> Default Setting: <b>Clear (000.000.000.000)</b>
Specifies the Communication Port Subnet Mask when Port Use is set to NetLink for the COM port.

**Table 8: Communication Protocol Options**

<b>Communication Port Link Protocol</b>
Possible Settings: <b>PPP, SLIP</b> Default Setting: <b>PPP</b>
Specifies the Communication Port link layer protocol when Port Use is set to NetLink for the COM port.

**Table 9: General SNMP Management Options**

<b>SNMP Management</b>
Possible Settings: <b>Enable, Disable</b> Default Setting: <b>Enable</b>
Enables or disables the SNMP management features.
<b>Community Name 1</b>
Possible Settings: <i>ASCII text field</i> , <b>Public, Clear</b> Default Text: <b>Public</b>
Identifies the name of the community allowed to access the unit's MIB. The community name must be supplied by an external SNMP manager when that manager attempts to access an object in the MIB.
<b>Name 1 Access</b>
Possible Settings: <b>Read, Read/Write</b> Default Setting: <b>Read/Write</b>
Determines the access level for Community Name 1.
<b>Community Name 2</b>
Possible Settings: <i>ASCII text field</i> , <b>Clear</b> Default Text: <b>Clear (null string)</b>
Identifies the name of the second community allowed to access the unit's MIB. The community name must be supplied by an external SNMP manager when that manager attempts to access an object in the MIB.
<b>Name 2 Access</b>
Possible Settings: <b>Read, Read/Write</b> Default Setting: <b>Read</b>
Determines the access level for Community Name 2.

**Table 10: SNMP NMS Security Options**

<b>NMS IP Validation</b>
Possible Settings: <b>Enable, Disable</b> Default Setting: <b>Disable</b>
For IP Complex systems, specifies whether security checking is performed on the IP address of SNMP management systems attempting to access the node.
<b>NMS <i>n</i> IP Address</b>
Possible Settings: <b>001.000.000.000 – 223.255.255.255, Clear</b> Default Setting: <b>000.000.000.000</b>
For IP Complex systems, specifies the Internet Protocol address used to identify each SNMP trap manager (limit of 10).
<b>Access Type</b>
Possible Settings: <b>Read, Read/Write</b> Default Setting: <b>Read</b>
For IP Complex systems, determines the access level allowed for an authorized NMS when IP address validation is being performed.

**Table 11: SNMP Traps Options (1 of 2)**

<b>SNMP Traps</b>
Possible Settings: <b>Enable, Disable</b> Default Setting: <b>Enable</b>
Controls the generation of SNMP trap messages.
<b>NMS <i>n</i> IP Address</b>
Possible Settings: <b>001.000.000.000 – 223.255.255.255, Clear</b> Default Setting: <b>000.000.000.000</b>
For IP Complex systems, specifies the Internet Protocol address used to identify each SNMP trap manager (limit of 5).
<b>NMS <i>n</i> Destination</b>
Possible Settings: <b>DSL, COM</b> Default Setting: <b>DSL</b>
For IP Complex systems, provides the network destination path of each trap manager. COM displays if Port Use is set to NetLink.

**Table 11: SNMP Traps Options (2 of 2)**

<b>General Traps</b>
Possible Settings: <b>Disable, Warm, AuthFail, Both</b> Default Setting: <b>Both</b>
Determines which SNMP traps are sent to each trap manager.
<b>Enterprise Specific Traps</b>
Possible Settings: <b>Enable, Disable</b> Default Setting: <b>Disable</b>
Determines if SNMP traps are generated for enterprise-specific events.
<b>Link Traps</b>
Possible Settings: <b>Disable, Up, Down, Both</b> Default Setting: <b>Both</b>
Determines if SNMP traps are generated for link up and link down for one of the communication interfaces.
<b>Link Traps Interfaces</b>
Possible Settings: 7995: <b>Network, SYNC, All</b> 7996: <b>Network, G.703, All</b> Default Setting: <b>All</b>
Determines if the SNMP <i>linkUp</i> , <i>linkDown</i> , and interface-related <i>enterpriseSpecific</i> traps are generated for the network interface, synchronous or G.703 port, or both.

# Configuring the Unit Using the Internal Switches

You can use the internal switches to manually configure the unit.

## HANDLING PRECAUTIONS FOR STATIC-SENSITIVE DEVICES

This product is designed to protect sensitive components from damage due to electrostatic discharge (ESD) during normal operation. When performing installation procedures, however, take proper static control precautions prevent damage to equipment. If you are not sure of the proper static control precautions, contact your nearest sales or service representative.




## Procedure

To configure the unit using internal Switchpack S3:

- 1 Power off the unit.
- 2 Remove the enclosure cover:
  - Use a Phillips screwdriver to remove the two screws from the top of the unit.
  - Push a flat-blade screwdriver through the slots on both sides of the housing to free the four inner latches.
- 3 Locate Switchpack S3 on the circuit board using [Figure 1, Hotwire TDM SHDSL Endpoint Switchpack Locations](#).
- 4 Set Switch 6 on Switchpack S3 to ON to enable the switchpack.
- 5 Set the switches to your desired configuration:
  - For Model 7995, refer to [Table 12](#).
  - For Model 7996, refer to [Table 13](#).
- 6 Replace the cover and fasten it with the two screws.
- 7 Power on the board to reset the unit and enable the new configuration.

# Switchpack Location

Use the following illustration to locate Switchpack S3.

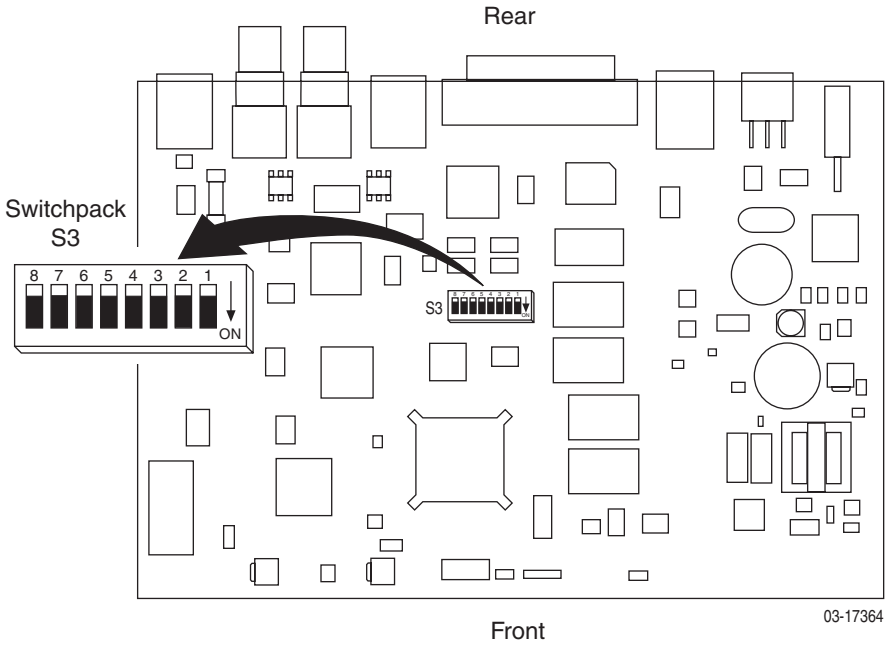

**Figure 1: Hotwire TDM SHDSL Endpoint Switchpack Locations**

# Model 7995 Switchpack Definitions

Table 12 lists Model 7995 Switchpack definitions.

**Table 12: Switchpack S3 Definitions – Model 7995**

Switch #	Allows you to . . . <i>Default in Bold</i>																																																		
1	Control whether the unit is an STC-C or an STU-R <b>OFF = STU-R</b> ON = STU-C																																																		
2	Control enabling of either Fixed Rate or Auto Rate mode. <b>OFF = Fixed Rate Mode</b> ON = Auto Rate Mode																																																		
3, 4, 5	Select one of eight preset DSL line rates. If Auto Rate is enabled, DSL Line Rate represents the Auto Rate ceiling. Valid only for a unit configured as an STU-C. <table border="1" data-bbox="200 673 979 1047"> <thead> <tr> <th colspan="3">Switch Position</th> <th>DSL Line Rate</th> <th><i>Default in Bold</i></th> </tr> <tr> <th>5</th> <th>4</th> <th>3</th> <td></td> <td></td> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>2056 kbps</td> <td></td> </tr> <tr> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>200 kbps</td> <td></td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>264 kbps</td> <td></td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>ON</td> <td>392 kbps</td> <td></td> </tr> <tr> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>520 kbps</td> <td></td> </tr> <tr> <td>ON</td> <td>OFF</td> <td>ON</td> <td>776 kbps</td> <td></td> </tr> <tr> <td>ON</td> <td>ON</td> <td>OFF</td> <td>1032 kbps</td> <td></td> </tr> <tr> <td>ON</td> <td>ON</td> <td>ON</td> <td>1544 kbps</td> <td></td> </tr> </tbody> </table>	Switch Position			DSL Line Rate	<i>Default in Bold</i>	5	4	3			OFF	OFF	OFF	2056 kbps		OFF	OFF	ON	200 kbps		OFF	ON	OFF	264 kbps		OFF	ON	ON	392 kbps		ON	OFF	OFF	520 kbps		ON	OFF	ON	776 kbps		ON	ON	OFF	1032 kbps		ON	ON	ON	1544 kbps	
Switch Position			DSL Line Rate	<i>Default in Bold</i>																																															
5	4	3																																																	
OFF	OFF	OFF	2056 kbps																																																
OFF	OFF	ON	200 kbps																																																
OFF	ON	OFF	264 kbps																																																
OFF	ON	ON	392 kbps																																																
ON	OFF	OFF	520 kbps																																																
ON	OFF	ON	776 kbps																																																
ON	ON	OFF	1032 kbps																																																
ON	ON	ON	1544 kbps																																																
6	Enable or disable Switchpack S3. <b>OFF = Switchpack Disabled</b> ON = Switchpack Enabled																																																		
7, 8	Control the sync port data rate. Specifies the maximum payload rate when the DSL line rate is 200 kbps. Valid only for a unit configured as an STU-C, in Fixed Rate Mode. <table border="1" data-bbox="200 1291 936 1477"> <thead> <tr> <th colspan="2">Switch Position</th> <th>Sync Data Port Rate</th> <th><i>Default in Bold</i></th> </tr> <tr> <th>7</th> <th>8</th> <td></td> <td></td> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>OFF</td> <td>192 kbps</td> <td></td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>128 kbps</td> <td></td> </tr> <tr> <td>ON</td> <td>ON</td> <td>64 kbps</td> <td></td> </tr> </tbody> </table>	Switch Position		Sync Data Port Rate	<i>Default in Bold</i>	7	8			OFF	OFF	192 kbps		OFF	ON	128 kbps		ON	ON	64 kbps																															
Switch Position		Sync Data Port Rate	<i>Default in Bold</i>																																																
7	8																																																		
OFF	OFF	192 kbps																																																	
OFF	ON	128 kbps																																																	
ON	ON	64 kbps																																																	

# Model 7996 Switchpack Definitions

Table 13 lists Model 7996 Switchpack definitions.

**Table 13: Switchpack S3 Definitions – Model 7996**

Switch #	Allows you to . . . <i>Default in Bold</i>																																																		
1	Control whether the unit is an STU-C or an STU-R. <b>OFF = STU-R</b> ON = STU-C																																																		
2	Control enabling of either Fixed Rate or Auto Rate mode. Valid only for a unit configured as an STU-C. <b>OFF = Fixed Rate mode</b> ON = Auto Rate mode																																																		
3, 4, 5	Select one of eight preset DSL line rates. If Auto Rate is enabled, DSL Line Rate represents the AutoRate ceiling. Valid only for a unit configured as an STU-C. <table border="1" data-bbox="201 699 979 1068"> <thead> <tr> <th colspan="3">Switch Position</th> <th>DSL Line Rate</th> <th><i>Default in Bold</i></th> </tr> <tr> <th>5</th> <th>4</th> <th>3</th> <td></td> <td></td> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>2056 kbps</td> <td></td> </tr> <tr> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>200 kbps</td> <td></td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>264 kbps</td> <td></td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>ON</td> <td>392 kbps</td> <td></td> </tr> <tr> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>520 kbps</td> <td></td> </tr> <tr> <td>ON</td> <td>OFF</td> <td>ON</td> <td>776 kbps</td> <td></td> </tr> <tr> <td>ON</td> <td>ON</td> <td>OFF</td> <td>1032 kbps</td> <td></td> </tr> <tr> <td>ON</td> <td>ON</td> <td>ON</td> <td>1544 kbps</td> <td></td> </tr> </tbody> </table>	Switch Position			DSL Line Rate	<i>Default in Bold</i>	5	4	3			OFF	OFF	OFF	2056 kbps		OFF	OFF	ON	200 kbps		OFF	ON	OFF	264 kbps		OFF	ON	ON	392 kbps		ON	OFF	OFF	520 kbps		ON	OFF	ON	776 kbps		ON	ON	OFF	1032 kbps		ON	ON	ON	1544 kbps	
Switch Position			DSL Line Rate	<i>Default in Bold</i>																																															
5	4	3																																																	
OFF	OFF	OFF	2056 kbps																																																
OFF	OFF	ON	200 kbps																																																
OFF	ON	OFF	264 kbps																																																
OFF	ON	ON	392 kbps																																																
ON	OFF	OFF	520 kbps																																																
ON	OFF	ON	776 kbps																																																
ON	ON	OFF	1032 kbps																																																
ON	ON	ON	1544 kbps																																																
6	Enable or disable Switchpack S3. <b>OFF = Switchpack Disabled</b> ON = Switchpack Enabled																																																		
7	Determines whether G.704 Framing is used. Applies only to an STU-C. <b>OFF = Framed</b> ON = Unframed (Applies only when DSL line rate is 2056 kbps.)																																																		
8	Determines whether Channel 16 contains signaling information (voice mode) or data. Applies only to an STU-C configured for G.704 framing. <b>OFF = Channel 16 used for signaling</b> ON = Channel 16 used for data																																																		

# Important Safety Instructions

- 1 Read and follow all warning notices and instructions marked on the product or included in the manual.
- 2 Input power to this product must be provided by one of the following: (1) a UL Listed/CSA Certified power source with a Class 2 or Limited Power Source (LPS) output for use in North America; or (2) a 24 or –48 VDC National Electric Code (NEC) ANSI/NFPA 70/Canadian Electric Code (CEC) Class 2 circuit installed in accordance with articles 110-16, 110-17, and 110-18 of the NEC, and articles 2-308, 2-310, 2-312, 2-314, 2-200, and 2-202 of the CEC, or (3) a Safety Extra Low Voltage (SELV) power source with a maximum available output of less than 240 VA, certified for use in the country of installation.
- 3 Slots and openings in the cabinet are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these slots and openings must not be blocked or covered.
- 4 Do not allow anything to rest on the power cord and do not locate the product where persons will walk on the power cord.
- 5 Do not attempt to install or service this product yourself, as opening or removing covers may expose you to dangerous high voltage points or other risks. Refer all installation and servicing to qualified service personnel.
- 6 General purpose cables are provided with this product. Special cables, which may be required by the regulatory inspection authority for the installation site, are the responsibility of the customer.
- 7 When installed in the final configuration, the product must comply with the applicable Safety Standards and regulatory requirements of the country in which it is installed. If necessary, consult with the appropriate regulatory agencies and inspection authorities to ensure compliance.
- 8 A rare phenomenon can create a voltage potential between the earth grounds of two or more buildings. If products installed in separate buildings are **interconnected**, the voltage potential may cause a hazardous condition. Consult a qualified electrical consultant to determine whether or not this phenomenon exists and, if necessary, implement corrective action prior to interconnecting the products.
- 9 In addition, if the equipment is to be used with telecommunications circuits, take the following precautions:
  - Never install telephone wiring during a lightning storm.
  - Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
  - Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
  - Use caution when installing or modifying telephone lines.
  - Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
  - Do not use the telephone to report a gas leak in the vicinity of the leak.

## CE Marking

When the product is marked with the CE mark on the equipment label, a supporting Declaration of Conformity may be downloaded from the Zhone website at [www.zhone.com](http://www.zhone.com).

# Contacting Global Service and Support

Contact Global Service and Support (GSS) if you have any questions about this or other Zhone products. Before contacting GSS, make sure you have the following information:

- Zhone product you are using
- System configuration
- Software version running on the system
- Description of the issue

## Technical Support

If you require assistance with the installation or operation of your product, or if you want to return a product for repair under warranty, contact GSS. The contact information is as follows:

E-mail	<a href="mailto:support@zhone.com">support@zhone.com</a>
Telephone (North America)	877-ZHONE20
Telephone (International)	510-777-7133
Internet	<a href="http://www.zhone.com/support">www.zhone.com/support</a>

If you purchased the product from an authorized dealer, distributor, Value Added Reseller (VAR), or third party, contact that supplier for technical assistance and warranty support.

## Service Requirements

If the product malfunctions, all repairs must be performed by the manufacturer or a Zhone-authorized agent. It is the responsibility of users requiring service to report the need for service to GSS.

## Trademarks

Acculink, ADSL/R, Bitstorm, Comsphere, DSL the Easy Way, Etherloop, FrameSaver, GigMux, GrandSLAM, GrandVIEW, Hotwire, the Hotwire logo, iMarc, JetFusion, Jetstream, JetVision, MALC, NextEDGE, Net to Net Technologies, Paradyne, the Paradyne logo, Quick Channel, Raptor, ReachDSL, SLMS, StormPort, TruePut, Z-Edge, Zhone, ZMS, and the Zhone logo are trademarks owned by Zhone Technologies, Inc., which may be registered in some jurisdictions.





\*7990-A2-ZN10-30\*