

BitStorm™ 2400 Ferrite Choke Installation Instructions

Document Number 2400-A2-GZ40-00

June 2002

Overview


This document describes the procedure for installing a ferrite choke onto the 50-pin EtherLoop cable that services the BitStorm™ 2400 IP DSLAM.

Installation

► Procedure

To install the ferrite choke onto the 50-pin EtherLoop cable:

1. Open the ferrite choke and place it around the cable as close to the cable connector on the chassis as possible.
2. Close the two halves around the cable and snap the choke shut, pressing down on the plastic latch to secure it.
3. If necessary to prevent the ferrite choke from slipping down the cable, install a tie wrap behind the ferrite choke as shown.

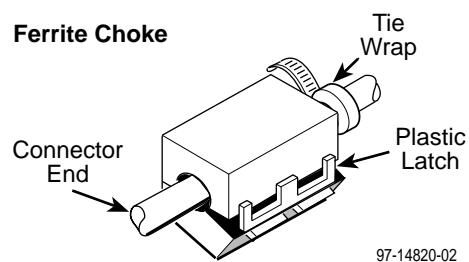

2400-A2-GZ40-00