

BitStorm 6200 CPE Mounting Bracket Installation Instructions


Document Number 6200-A2-GN10-00

December 2003

The BitStorm 6200 CPE modem mounting bracket (Feature Number 6200-F1-001) can be used to fasten the CPE to a wall, or to the side or underside of a desk.

Placing the CPE in the Bracket

The CPE can be placed in the bracket with either the top or the bottom of the CPE facing the inside of the bracket. Determine where you will mount the CPE, then place the CPE in the bracket in the way that makes it easiest for you to read the front panel LED labels.

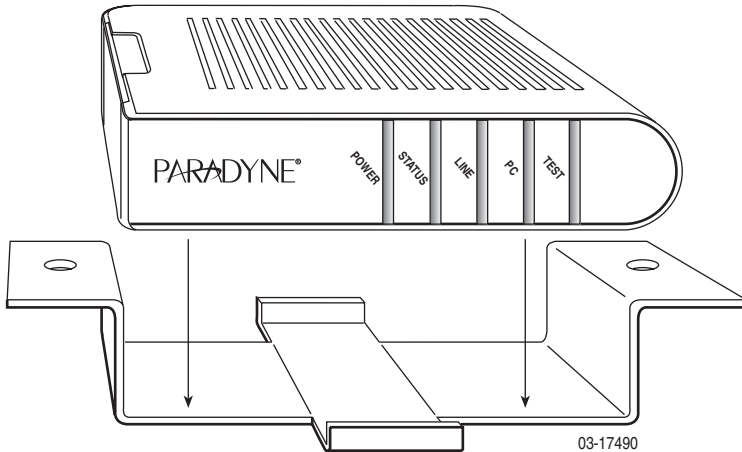


Installing the Bracket on a Wall or Desk


► Procedure

To attach the mounting bracket to a wall or to the side or underside of a desk:

1. Hold the CPE and bracket in the desired location and mark the hole positions.
2. In hardwood or steel surfaces, drill 5/64-inch (2-mm) pilot holes at the marked hole positions.
3. For vertical mounts, it may be difficult to connect cables after the CPE is fastened. In such cases connect the cables to the CPE *before* fastening it to the wall or desk.
4. Fasten the bracket using the two supplied 1/2-inch (13-mm) #6 screws. Use screw anchors (not provided) in drywall or other soft materials.

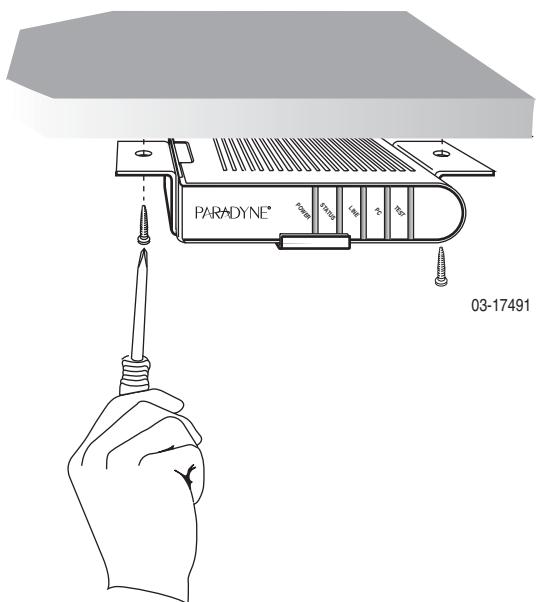

03-17491

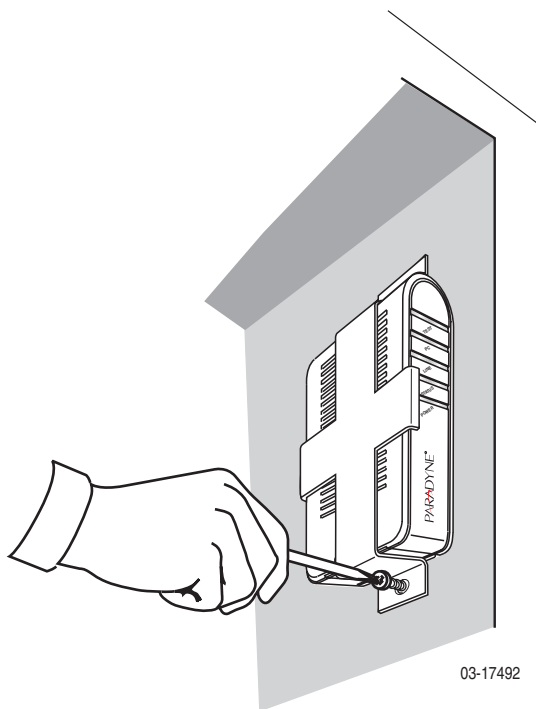

03-17492

Document Feedback

We welcome your comments and suggestions about this document. Please mail them to Technical Publications, Paradyne Corporation, 8545 126th Ave. N., Largo, FL 33773, or send e-mail to userdoc@paradyne.com. Include the number and title of this document in your correspondence. Please include your name and phone number if you are willing to provide additional information.

Trademarks

All products and services mentioned herein are the trademarks, service marks, registered trademarks, or registered service marks of their respective owners.



6200-A2-GN10-00