



Z H O N E™

6218 Wireless Router Quick Installation Instructions


Document Number 6218-A2-ZZ10-10

December 2005

Installation

- 1 Connect the DSL line to the LINE jack using the provided RJ11 cable.
- 2 Optionally, connect a phone to the PHONE jack. This phone does not require a POTS splitter.
- 3 Connect PCs, hubs, and switches to the LAN ports. Either a straight-through Ethernet cable (provided) or a crossover cable can be used. The router automatically determines the type of signal required.
- 4 Attach the power adapter. The supplied power adapter may look different than the one illustrated here.
- 5 Configure your router and your wireless devices to communicate with each other.

See the user's guide on the CD for information about configuring your router using your web browser.

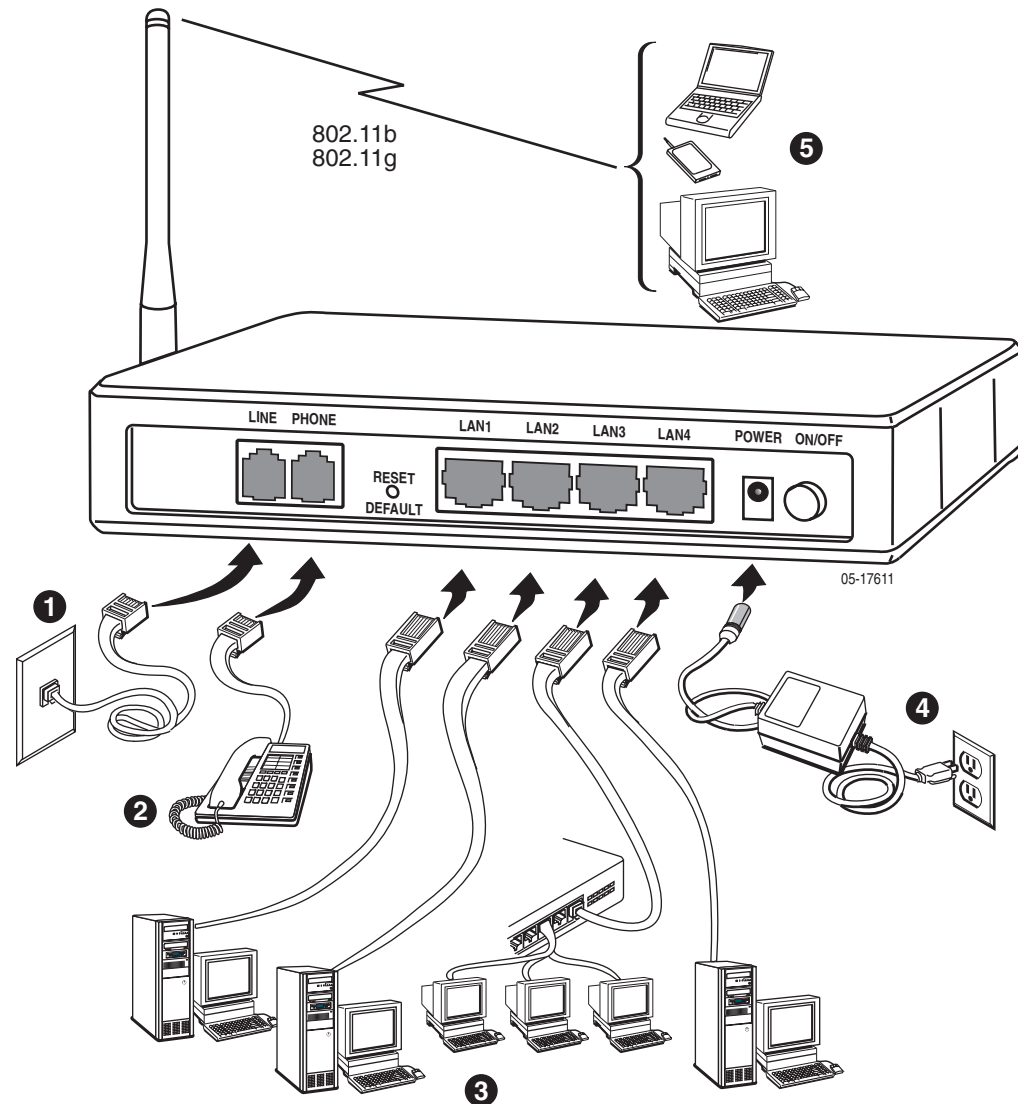

6218-A2-ZZ10-10

Copyright © 2005 Zhone Technologies, Inc.