

SuperLine™ IAD Model 6502 Quick Installation

Document Number 6502-A2-GZ40-00

September 1999


Quick Installation

- 1 Go to the room where you want your new phone lines. Plug the phone cable that came with the SuperLine IAD into the wall jack. Plug the other end of the phone cable into the LINE jack on the back of the SuperLine IAD.
- 2 Plug a phone into the PHONE 1/2 jack.
- 3 Plug a second phone into the PHONE 2 jack.
- 4 Plug the power transformer into an ac outlet and the POWER jack.


See the SuperLine IAD Installation Instructions for more information.

Phone Filters

Connect a phone filter to all the phones and other devices (such as fax machines, answering machines, alarm systems, or modems) that are attached to the same line as the SuperLine IAD. (Do not connect a filter to any device you plug into the SuperLine IAD.)

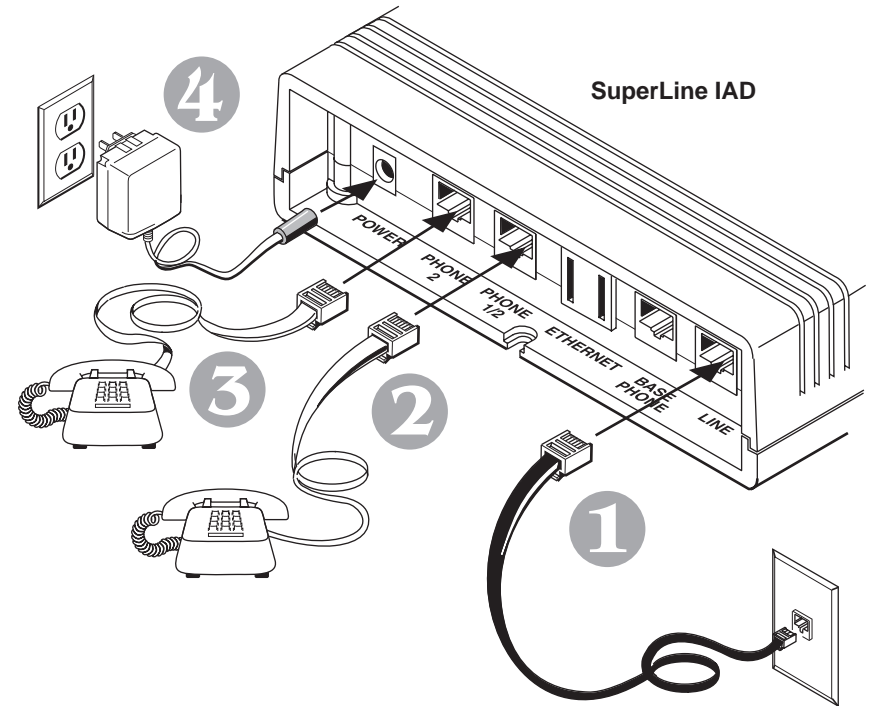

99-16495

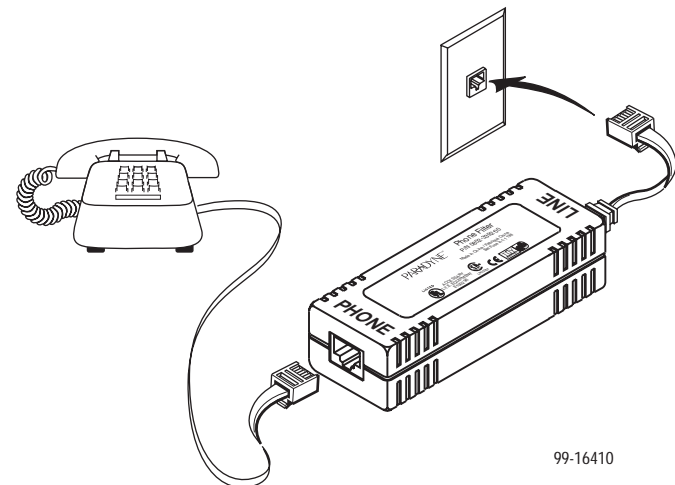

99-16410



6502-A2-GZ40-00