

SuperLine™ IAD Model 6510 Quick Installation

Document Number 6510-A2-GZ40-00

September 1999


Quick Installation

- 1 Go to the room where you want your high-speed data connection. Plug the phone cable that came with the SuperLine IAD into the wall jack. Plug the other end of the phone cable into the LINE jack on the back of the SuperLine IAD.
- 2 Plug your Ethernet cable into the ETHERNET jack. Plug the other end of the cable into the network interface card in your PC, or into your Ethernet hub.
Use an Ethernet crossover cable to connect a PC, or a straight-through Ethernet cable to connect a hub.
- 3 Pop open the ferrite choke using a fingernail or a coin.
- 4 Close it around the power cable near the round plug. Slide the ferrite choke as close to the plug as it will go. Installation of this choke is essential to maintain compliance with Part 15, FCC Rules.
- 5 Plug the power transformer into an ac outlet and the POWER jack.


See the SuperLine IAD Installation Instructions for more information.

Phone Filters

Connect a phone filter to all the phones and other devices (such as fax machines, answering machines, alarm systems, or modems) that are attached to the same line as the SuperLine IAD. (Do not connect a filter to any device you plug into the SuperLine IAD.)

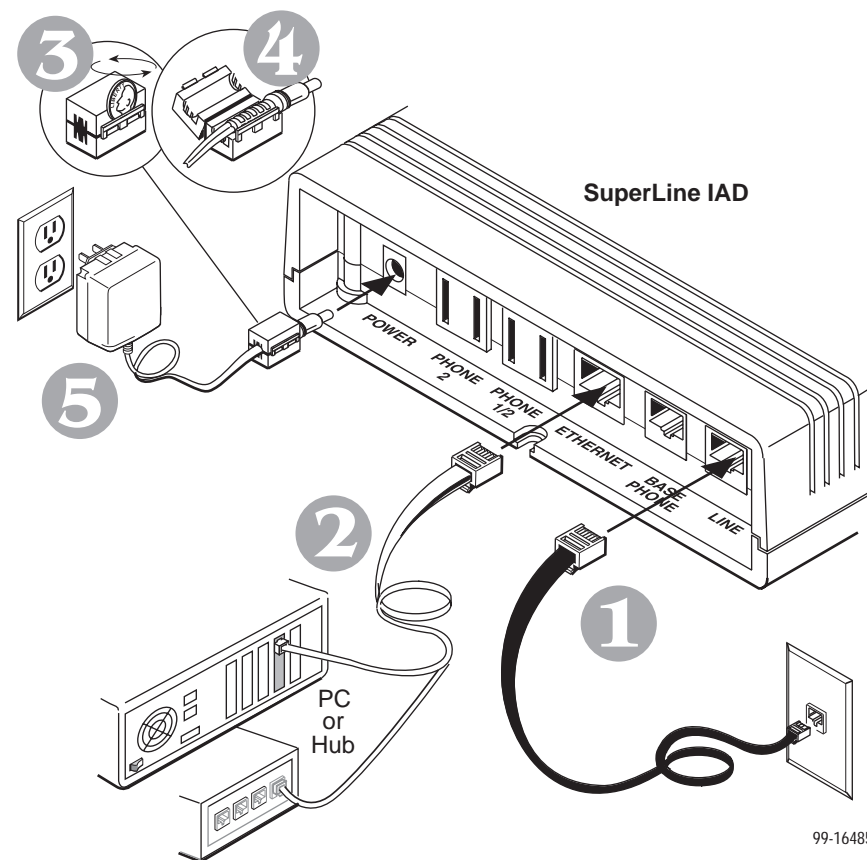

99-16485

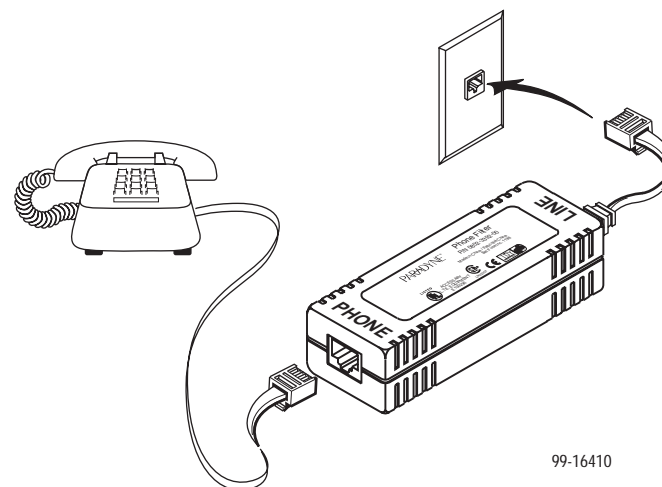

99-16410



6510-A2-GZ40-00