

SuperLine™ IAD Model 6512-A1 Quick Installation

Document Number 6512-A2-GL71-10

August 1999

Quick Installation for One Extra Phone Line


If you are adding two extra phone lines, see the other side of this page. If you are adding one extra phone line, follow these steps:

- 1 Go to the room where you want your new phone line. Plug the phone cord that came with the SuperLine IAD into the wall jack. Plug the other end of the phone cord into the LINE jack on the back of the SuperLine IAD.
- 2 Plug a phone into the PHONE 1-2 jack.
- 3 Plug the power supply into the POWER jack and an ac outlet.

See the Installation Instructions for more information.

Phone Filters

- 4 Connect a phone filter to all the phones and other devices (such as fax machines, answering machines, alarm systems, or modems) that are attached to the same line as the SuperLine IAD.
- 5 If you connect a phone or other device to the BASE PHONE jack of the SuperLine IAD, use a phone filter.

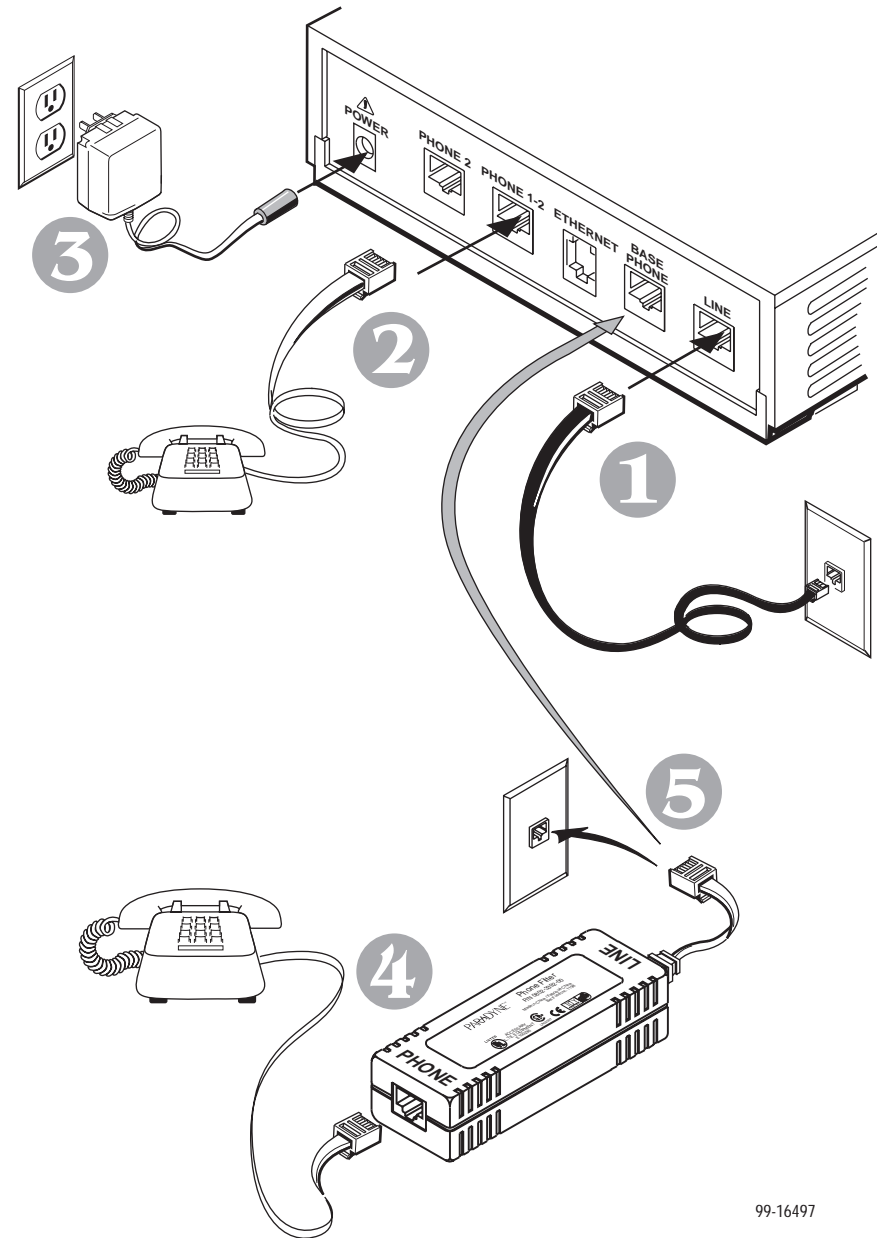

Quick Installation for Two Extra Phone Lines


If you are adding only one extra phone line, see the other side of this page. If you are adding two extra phone lines, follow these steps:

- 1 Go to the room where you want your new phone lines. Plug the phone cord that came with the SuperLine IAD into the wall jack. Plug the other end of the phone cord into the LINE jack on the back of the SuperLine IAD.
- 2 Plug a phone into the PHONE 1-2 jack.
- 3 Plug a second phone into the PHONE 2 jack.
- 4 Plug the power supply into the POWER jack and an ac outlet.

See the Installation Instructions for more information.

Phone Filters

- 5 Connect a phone filter to all the phones and other devices (such as fax machines, answering machines, alarm systems, or modems) that are attached to the same line as the SuperLine IAD.
- 6 If you connect a phone or other device to the BASE PHONE jack of the SuperLine IAD, use a phone filter.

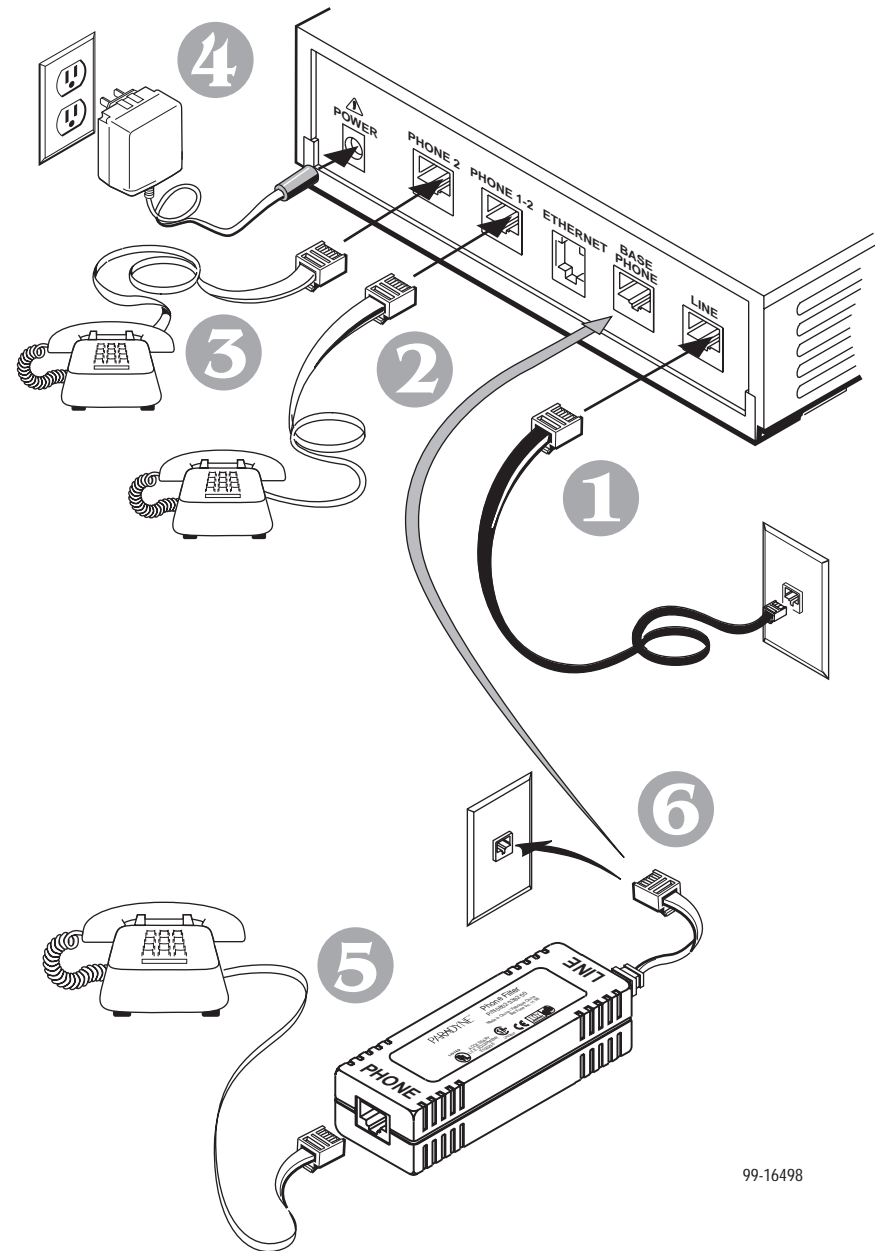

99-16498



6512-A2-GL71-10