
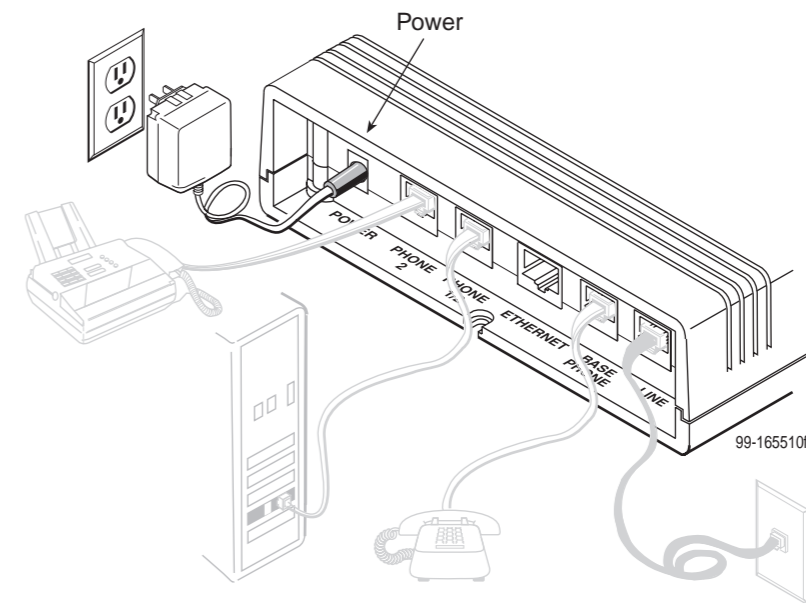
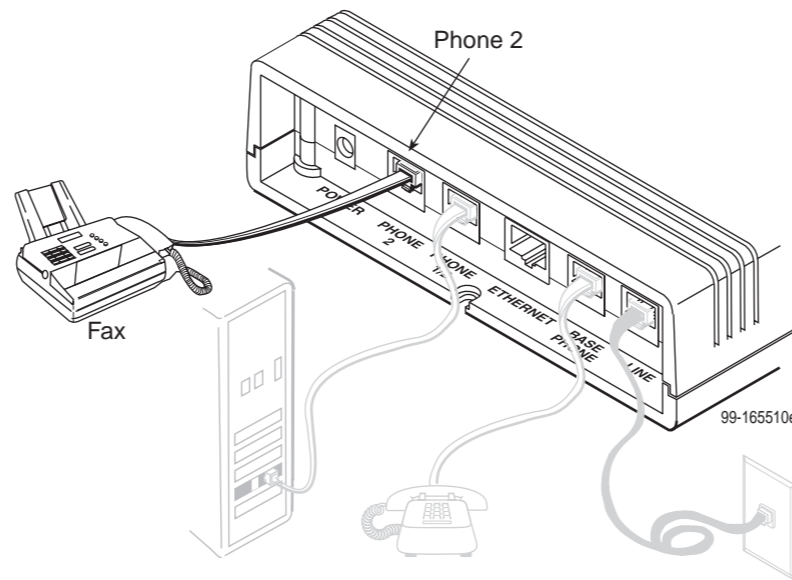


1 Decide what wall jack you will use for your new phone lines. Plug a phone filter into every other jack where you have existing phones and other devices attached to the same phone line that the SuperLine IAD will be. (Do not connect a filter to any device you plug into the SuperLine IAD.) Devices may include wall phones, cordless phones, answering machines, fax machines, modems, caller ID display devices, security alarm systems, TV-based Internet access devices, and direct broadcast satellite receivers. Contact your service provider if you need more filters.

2 Go to the room where you want your new phone lines. Plug the phone cord that came with the SuperLine IAD into the wall jack. Plug the other end of the phone cord into the LINE jack on the back of the SuperLine IAD.

3 Plug your existing phone into the BASE PHONE jack.

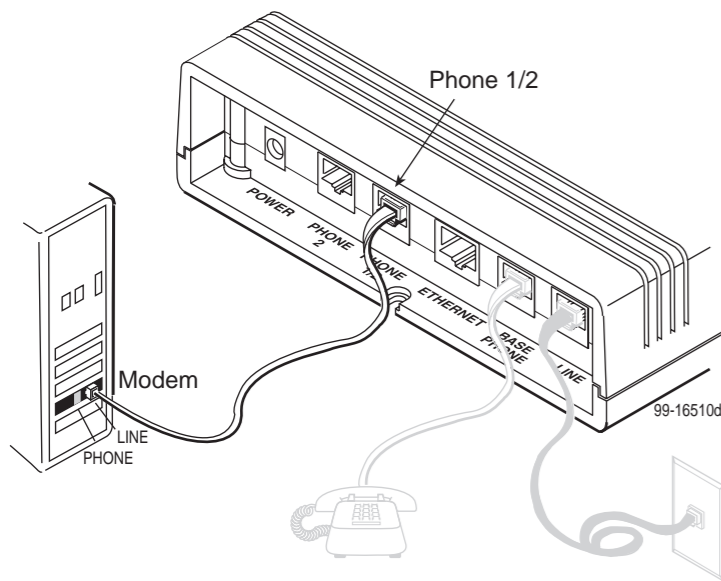

4 Connect a phone or other device (such as the line jack of a modem) into the PHONE 1/2 jack.

5 If you have service for two extra lines, connect a phone or other device (such as the line jack of a fax machine) into the PHONE 2 jack.

6 Plug the power transformer into the POWER jack and an ac outlet.



Package Checklist

Verify that your package contains the following items. If anything is missing or you need to order additional hardware, contact your service provider.

