

## Hotwire® TDM SDSL Termination Unit Ferrite Choke Installation Instructions

Document Number 7900-A2-GK41-00

December 2000

---

A ferrite choke is included with this Hotwire® TDM SDSL Termination Unit, which needs to be installed on the DSL network cable.


### CAUTION

**When ferrite chokes are supplied, they must be installed following these instructions to be in compliance with FCC Part 15, VCCI, and CISPR22 rules.**

### ► Procedure

To install the ferrite choke on the DSL network cable:

1. Open the ferrite choke and place it around the cable, as close to the termination unit as possible.
2. Close the two halves around the cable and snap the latch shut.

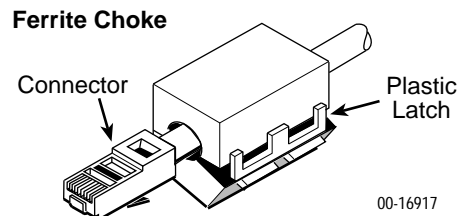

Hotwire is a registered trademark of Paradyne Corporation.



\*7900-A2-GK41-00\*