



Hotwire® 8820 GrandSLAM Front Cable Management Bracket Installation Instructions

Document Number 8900-A2-GZ41-00

April 2004

Introduction

Feature number 8900-F1-001 was created to manage cables attached to the faceplates of 48-port line cards installed in the model 8820 GrandSLAM chassis. It consists of four brackets attached to the rails at the front of the chassis.

The cable management brackets cannot be used with the Optical Fiber Saddle (part number 110-0024-0031), a device with plastic loops which fits into the base of the chassis. Remove the saddle if it is installed in a chassis that will house 48-port cards.

Package Contents

Feature number 8900-F1-001 includes four brackets and four cable ties.

Product Documentation Online

Documentation for related products is available at www.paradyne.com. Select *Support* → *Technical Manuals* → *Hotwire DSL Systems*.

Document Number	Document Title
8820-A2-GN20	<i>Hotwire 8820 GrandSLAM Installation Guide</i>
8900-A2-GZ40	<i>Hotwire ATM Line Cards, Models 8955, 8965, 8968, and 8985, Installation Instructions</i>


To order a paper copy of a Paradyne document, or to speak with a sales representative, please call 727-530-2000.

Installing the Brackets

► Procedure


To install the cable management brackets:

1. If you have not yet installed the 8820 GrandSLAM chassis, do so now according to the instructions in the *Hotwire 8820 GrandSLAM Installation Guide* (document number 8820-A2-GN20).
2. Loosen one chassis mounting screw enough to allow a cable management bracket to fit behind the screw head.
3. Fasten the cable management bracket to the rail tightly with the long side toward the chassis.

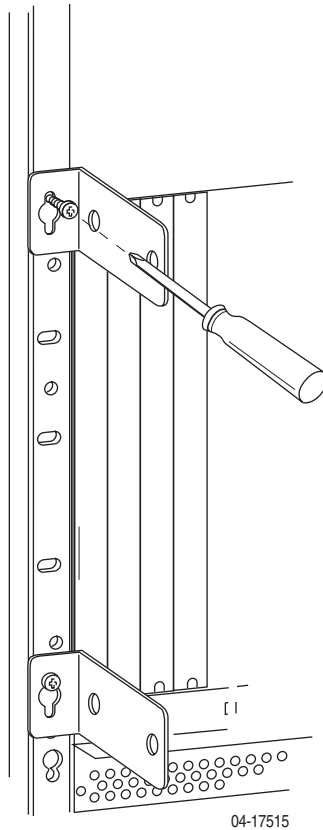

4. Repeat Step 2 through Step 3 for all four cable management brackets.

-
5. Attach cables to the faceplates of the line cards as described in the *Hotwire ATM Line Cards, Models 8955, 8965, 8968, and 8985, Installation Instructions* (document number 8900-A2-GZ40).
 6. Dress the cables up and outside the nearest brackets.

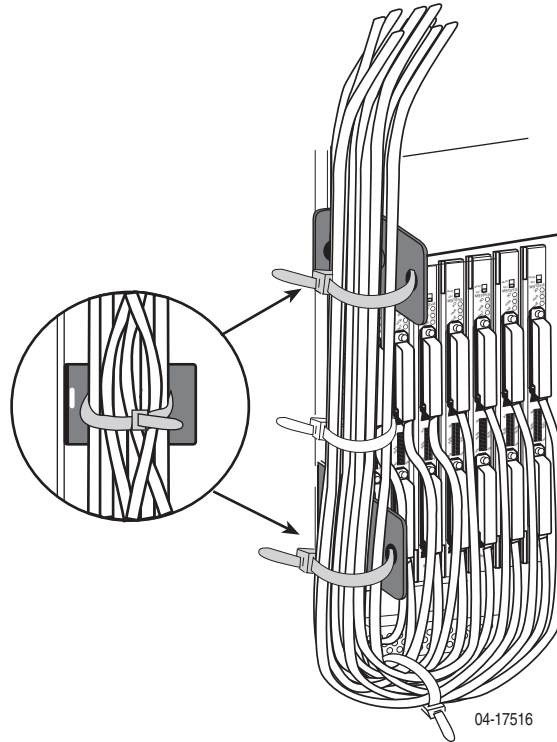

7. When you have connected all the cables, bundle the cables together in the brackets and hold them in place with cable ties looped through the brackets.



8900-A2-GZ41-00